



Quick Guide For Tempmaster™ Me Controller

Main Screens and Menus

Configure the Controller

- Configure Controller Settings
- Configure Global Settings
- Configure Zone Settings
- Set Zone Limits
- Set Zone Temperature
- Set Boost Or Standby Temperature

Operate the Controller

- Change Zone Temperature
- Switch To Manual Mode
- Switch Modes - Multiple Zones

Global Support

Main Screens and Menus

<p>Main Page</p>	<p>Functions:</p> <ul style="list-style-type: none"> Monitor - observe zone condition Control - choose mode Set - set or alter setpoint or Run modes
<p>ToolStore Page</p>	<p>Description:</p> <p>List of tools with their names and saved settings.</p>
<p>Setup Tool Page</p>	<p>Description:</p> <p>Gives access through [Config] button to:</p> <ul style="list-style-type: none"> Controller Settings Pages Global Settings Page
<p>Controller Setting Page</p>	<p>Description:</p> <p>Access to set or alter the following parameters:</p> <ul style="list-style-type: none"> Input Scale (temperature) Power Display Language Password Control Earth Leakage

Configure the Controller

Configure Controller Settings

- Choose [Tool] to open the ToolStore page.
- Choose [Setup] to open the Options page. If prompted, enter the System password.
- Choose [Config].
- Choose [Options] to open Controller Settings pages. Use [PgUp] and [PgDn] to view a list of all controller settings.
- Move the blue selection indicator to an option.
- Choose [Enter] to confirm or choose [Cancel] to leave without changing settings.

Controller Settings Options	
Input	Enables remote input to auxiliary HA4 socket
Scale	Choose °C or °F
Power Display	Displays percentage power or current
Language	Choose language displayed on console
Password Control	Enables or disables password access
Earth Leakage	Enables or disables earth leakage

Configure Global Settings

- Choose [Tool] to open the Tool page.
- Choose [Setup] to open the Options page. If prompted, enter the System password.
- Choose [Config].
- Choose [Global] to open the Global settings page.
- Choose [Edit] and enter required value.
- Choose [Back] to close panel and leave without making changes.

Global Settings Options	
Boost Time	Sets the length of time the Boost temperature is on
Max Temperature	Limits the highest temperature that user can set
Max Power	Limits the highest power level that user can set

Configure Zone Settings

1. Choose **[Tool]** to open the Tool page.
2. Choose **[Setup]** to open the Options page.
If prompted, enter the System password.
3. Choose one or more zones to display command buttons.
4. Choose **[Set]** to view the next page.
5. Choose **[Options]** to open zone settings.
Use **[PgUp]** and **[PgDn]** to view all controller settings.
6. Move the blue selection indicator to an option.
7. Choose **[Enter]** to confirm or **[Cancel]** to leave without making changes.

Zone Settings Options	
Alias	Makes zone active. User can designate a zone type.
Speed	User can override auto speed with manual speed
Sensor	User can choose either a J or K type thermocouple

Set Zone Limits

1. Choose **[Tool]** to open the Tool page.
2. Choose **[Setup]** to open the Options page.
If prompted, enter the System password.
3. Choose one or more zones to display command buttons.
4. Choose **[Edit]** and enter the required value(s).
5. Choose **[Cancel]** to return to the Main page.

Zone Limits Options	
Limits	Sets high and low alarm limits
Standby	Sets decrease in temperature for Standby mode
Boost	Sets increase in temperature for Boost mode

Set Zone Temperature

1. Choose one zone.
2. Choose another zone.
3. Choose **[Range]**.
4. Choose **[Set]**.
5. Enter password, if prompted.
6. Type in a new temperature.
7. Choose **[Ent]** to accept the new temperature or **[Bsp]** to leave the page without saving.

Set Boost or Standby Temperature

1. Choose **[Tool]** to open the Tool page.
2. Choose **[Setup]** to open the Options page.
If prompted, enter the System password.
3. Choose one or more zones.
4. Choose either **[Boost]** or **[Standby]**.
5. Choose **[Edit]** from panel to display the keypad.
6. Enter the required Boost or Standby temperature.
7. Choose **[Cancel]** to return to Main page.



Operate the Controller

Change Zone Temperatures

1. Choose one zone.
2. Choose another zone.
3. Choose **[Range]**.
4. Choose **[Set]**.
If prompted, enter the System password.
5. Choose one of the options:
 - **[Set]** - set a new temperature
 - **[Add]** - raise the overall temperature
 - **[Sub]** - lower the overall temperature
6. Enter the required value.
The new temperature will be shown on the Main page.

Switch to Manual Mode

1. Choose one zone.
2. Choose another zone.
3. Choose **[Range]**.
4. Choose **[Set]** and enter password if prompted.
5. Choose **[Man]** and set percentage power.
6. Choose **[Ent]**.

Switch Modes – Multiple Zones

1. From the Main page, choose a Mode button.
2. Choose **[OK]** to confirm or choose **[Cancel]** to leave without changing settings.

Mode Options	
[Run]	Switches all zones on
[Stop]	Switches all zones off
[Standby]	Reduces temperature in all zones with Standby temperatures configured
[Shutdown]	Begins switch off sequence determined by Startup mode
[Boost]	Temporarily increases temperatures in zone with Boost temperatures configured

GLOBAL SUPPORT

Global Headquarters Mold-Masters (2007) Limited tel: +1 905 877 0185 canada@moldmasters.com	European Headquarters Mold-Masters Europa GmbH tel: +49 7221 50990 germany@moldmasters.com
Asian Headquarters Mold-Masters (KunShan) Co, Ltd tel: +86 512 86162882 china@moldmasters.com	South American Headquarters Mold-Masters do Brasil Ltda. tel: +55 19 3518 0699 brazil@moldmasters.com
India Mold-Masters Technologies Private Limited tel: +91 422 423 4888 india@moldmasters.com	Japan Mold-Masters K.K. tel: +81 44 986 2101 japan@moldmasters.com
United Kingdom Mold-Masters (UK) Ltd tel: +44 1432 265768 uk@moldmasters.com	U.S.A. Mold-Masters Injectioneering LLC tel: +1 800 450 2270 (USA only) tel: +1 (248) 544-5710 usa@moldmasters.com